

Honeywell MS5145 Eclipse



Enter / Exit Configuration Mode



Send Numbers as Keypad Data



Configurable Prefix 1



Code Byte 1



Code Byte 7



Code Byte 5



Configurable Prefix 2



Code Byte 1



Code Byte 5



Code Byte 3



Enter / Exit Configuration Mode