

Virtuos HT-850- set prefix CTRL+F10



Remove Custom Defaults



Activate Defaults



USB Keyboard (PC)



Czech



Clear All Prefixes



Add Prefix

- 99 Prefix pro všechny typy kódů
- 05 CTRL make
- 1F F10
- 06 CTRL break



9



9



0



5



1



F



0



6



Save